


# 3P HYDROSHARK<sup>®</sup> MANUAL


For Installation, Operation & Maintenance  
in Concrete Manholes

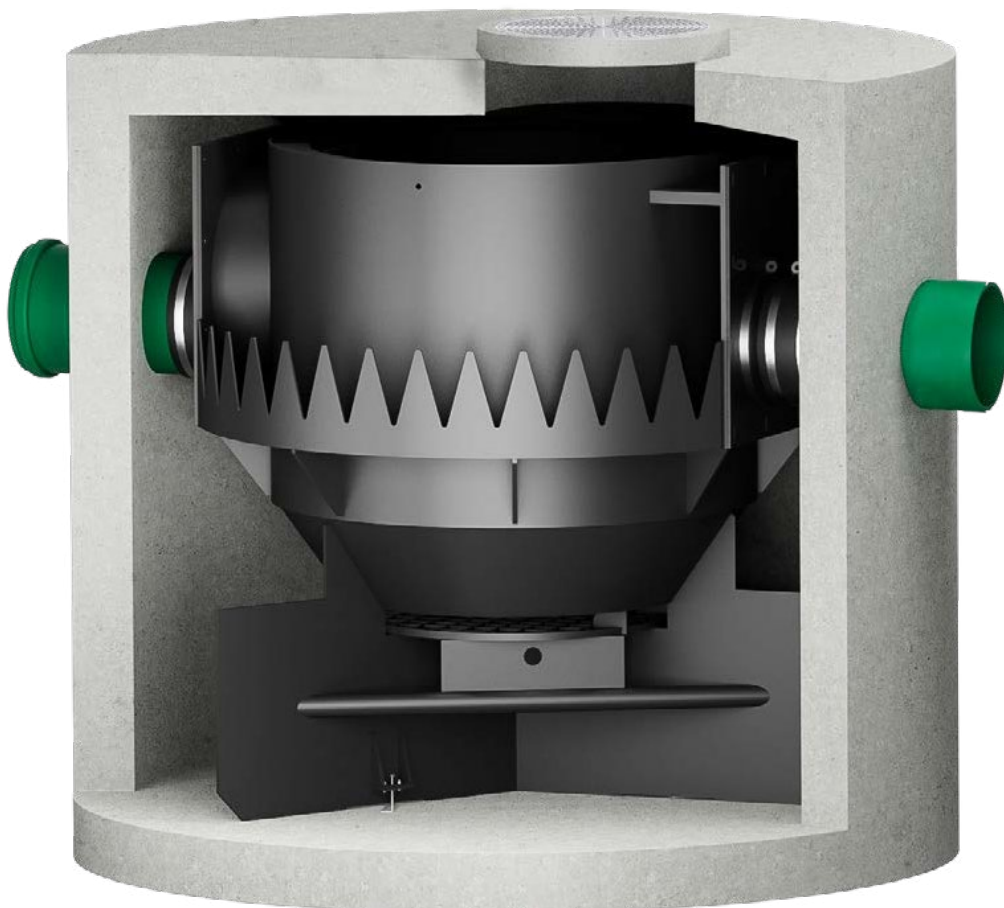

## TABLE OF CONTENTS

1. Introduction
2. Product Delivery and Inspection
3. Handling and Lifting the Hydroshark
4. Preparing the Excavation and Manhole
5. Installing the Hydroshark
6. Inspection, Maintenance and Cleaning

### HOW THE HYDROSHARK® WORKS

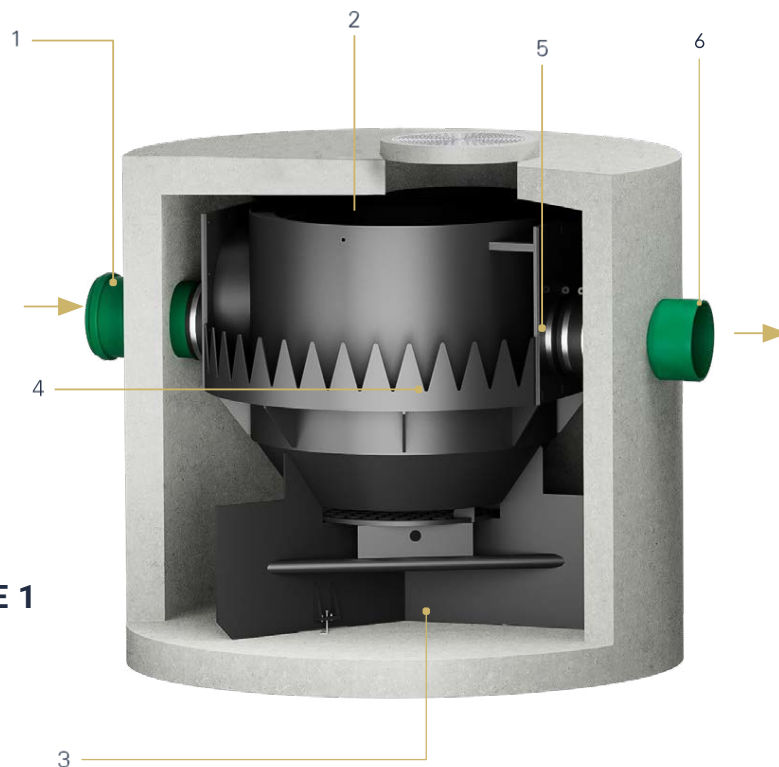

**IMAGE 1**

1. Stormwater flows through the inlet pipe into the center of the separator and a deflector plate creates a radial flow pattern.
2. Solids sink to the bottom of the manhole and floatables remain on the surface of the water.
3. Solids collect in the manhole, which is separated hydraulically from the treatment funnel by flow breakers/panels and a grate. Suspended and settled solids are periodically cleaned out when needed.
4. Cleaned water flows evenly upward, along the outer walls of the Hydroshark.
5. Cleaned water flows over a serrated weir into a channel.
6. The cleaned water flows out of the separator through the outlet pipe.

### NOTE TO CONTRACTING INSTALLER:

Before beginning the installation, read through this entire document. Keep this document at the work site to refer to safety procedures as needed. It is the contractor's responsibility to ensure that all the correct piping components required by product and site drawings have been ordered and are at the site before installation begins.

### SECTION 1: INTRODUCTION

1. These instructions relate to installing, operating and maintaining the Hydroshark.
2. Compliance with this manual is necessary for the proper handling, installation, maintenance, inspection and operation of these products.
3. It is the responsibility of the project owner and the installing contractor performing the installation to understand and follow all requirements contained in this document (the edition in effect at the time of installation), and to comply with all federal, state or provincial, and local safety regulations that apply.

**NOTE:** The presence of our representative does not relieve the installer of having sole responsibility for proper installation.

4. No instructions or procedures presented in this manual should be interpreted to put at risk any person's health or safety, or to harm any property or the environment.
5. Work must be performed according to standard industry practices applicable to this installation and product operation.
6. Work must comply with all relevant codes, regulations and standards of appropriate governmental agencies, such as:
  - construction, health, safety and environmental codes
  - industry standard practices
  - confined space entry
7. Governmental agency codes, regulations and standards always take precedence over our requirements.
8. Any variation to, or deviation from, these instructions must be approved in writing from us prior to installation.

9. Failure to comply with this document will avoid our obligations under the applicable limited warranty.
10. If project requirements exceed any of our requirements, the project engineer must consult with our engineers by contacting us at [contact@3ptechnik.com](mailto:contact@3ptechnik.com) for approval.
11. For any questions on the interpretation of these instructions or for any other technical inquiries, contact us at [contact@3ptechnik.com](mailto:contact@3ptechnik.com).

### SECTION 2: PRODUCT DELIVERY AND INSPECTION

12. Check the delivery against the project order. If any components are missing, contact your sales representative.
13. A Hydroshark will be shipped with the following (See IMAGE 1):
  - Straps to be used to lift and place the separator
  - 2 transition plates, and bolts for piping connections
  - 2 anchor plates, and nuts and bolts to attach the separator to the manhole

**NOTE:** The contractor is to supply a total of 4 anchors (to connect the 2 anchor plates to the manhole) and a minimum of 2 couplers (to connect the transition plate to the storm sewer). It is the contractor's responsibility to check product drawings for site piping and transition plate specifications to ensure that the correct couplers are ordered.

14. Visually inspect the Hydroshark and transition plates – both the interior and exterior – to make sure that no shipping or handling damage has occurred. Look particularly for visible damage, cracks or deep scrapes.

**NOTE:** Do not attempt any repairs. If damage is detected, contact your sales representative.

### SECTION 3: HANDLING AND LIFTING THE HYDROSHARK

**NOTE:** Protect the Hydroshark from dirt and debris during handling and installation.

15. Before unloading the Hydroshark when it is delivered, select a smooth, solid, level area on which to place it, and clear that area of all large rocks, trash and debris.

**NOTICE**

The installer must take care so that the Hydroshark is not rolled, dropped or damaged during loading, unloading, handling and installing as this could result in damage to the product.

16. Use the supplied straps of the separator to lift and set it. See **IMAGE 2**.



**⚠ CAUTION**

While moving or lifting the Hydroshark, do not position any part of your body underneath it. Failure to follow this caution could result in minor or moderate injury.

**SECTION 4: PREPARING THE EXCAVATION AND MANHOLE**

**⚠ WARNING**

Working in and around excavations is dangerous. Prior to beginning work, follow all OSHA and Canadian regulations related to excavations. Collapse of excavation walls could result in death or serious injury.

17. Locate the excavation location according to the project's site plan.
18. Prepare the excavation according to the site requirements and standard industry practices.
19. Make sure excavation walls are supported according to applicable industry and regulatory requirements.
20. Install the concrete manhole according to its manufacturer's instructions.
21. Before installing the manhole, make sure piping openings correspond to product drawings.

**SECTION 5: INSTALLING THE HYDROSHARK**

22. Before setting the Hydroshark into the excavation, bolt the transition plates to the inlet and outlet openings. See **IMAGE 3**.



23. Use the supplied straps to set the Hydroshark in the manhole to ensure proper alignment of piping, transition plates, and anchor plates.
24. Position and adjust the separator to make sure it is centered and plumb. If needed, use the adjustable bolts on the bottom of the separator to ensure that the separator is plumb and at the correct height. See **IMAGE 4**.

**NOTE:** Using spacers to attain correct positioning is not allowed.



25. Determine and mark the proper position for the anchor plates. See **IMAGE 5**.



### 3P HYDROSHARK® MANUAL

26. Remove the separator from the manhole.

27. Install the anchor plates. See **IMAGE 6**.



28. Place the separator back in the manhole, following above handling and setting instructions.

29. Connect each inlet and outlet piping to the corresponding transition plate with a coupler.



## SECTION 6: INSPECTION, MAINTENANCE AND CLEANING

**NOTE:** Proper and optimum operation of the Hydroshark requires following these recommended inspection, maintenance and cleaning guidelines.

- Log details of maintenance performed in the inspection, maintenance and cleaning records provided by the site owner.

30. The site owner is responsible for creating, recording and retaining inspection and maintenance records in accordance with their own site requirements and applicable regulations. The log at the end of this manual is provided only as an example.
31. After installation, we recommend that the Hydroshark be inspected a minimum of every 6 months, and after major rainfalls or storm events.
32. Inspection may then be increased or decreased based on observation. The owner is responsible for determining the inspection schedule.
33. We recommend that the site owner establish an inspection schedule based on the following factors:
  - Manhole or vault size
  - Site and environmental conditions
  - Drainage area
  - Annual rainfall
  - Volume of stormwater runoff
  - Volume of sediment, dirt, debris and trash entering the system
  - Volume and type of pollutants collected
34. Typically, the manhole must be emptied of sediment every 6 to 36 months.
35. Maintenance frequency is determined by the same factors stated above for determining inspection frequency. The owner is responsible for determining the maintenance schedule.
36. We recommend cleaning the separator using a pump-out vehicle equipped with suction and flushing capabilities, or a submersible sediment (sludge) pump with hoses.
37. Follow these steps to clean the Prime Separator:
  - Remove the floatables and oils from the water surface. See **IMAGE 7**.
  - Suction out the water until it is level with the top of the grate.
  - Remove any existing debris from the grate.
  - Lift and secure the hinged grate.
  - Suction out the sediment and solids from each section of the manhole. See **IMAGE 8**.
  - Rinse the manhole and separator with water.
38. Close and lock the grate and manhole cover.
39. Dispose of all removed water and waste material in accordance with applicable regulations.



## SAMPLE INSPECTION AND MAINTENANCE RECORD LOG

### SITE DATA

Site Owner	
Site Address	
Product Name & Number	
Order Number	
Installing Contractor	
Installation Date(s)	

### INSPECTION AND MAINTENANCE LOG

<b>Specify Inspection or Maintenance</b>					
<b>Date of Inspection or Maintenance</b>					
<b>Name of Inspector or Maintenance Contractor</b>					
<b>Visible Oil</b> Yes / No					
<b>Oil Removed</b> Yes / No					
<b>Floatable Debris</b> Yes / No					
<b>Floatingables Removed</b> Yes / No					
<b>Sediment</b> Record depth					
<b>Sediment Removed</b> Yes / No					
<b>Visible Product Damage</b> Yes / No					

NOTE: Consult appropriate regulatory agency for information on disposal of pumped-out water and waste material.

## 3P Technik Filtersysteme GmbH

Robert-Bosch-Straße 16-18  
73337 Bad Überkingen  
Deutschland

T +49 (0) 7334-92460-0

info@3ptechnik.de  
www.3ptechnik.de

PREMIUM QUALITY



MADE  
IN  
GERMANY